





Test Kit	
	<p>Test kits available built to your specifications with Texas Fairfax gauge adapters and thermometers and/or gauges.</p>  
	<p><b>Two cases sizes available:</b></p> <p><b>Small:</b> 12”L x 8”W x 2.5”D</p> <p><b>Large:</b> 15”L x 9”W x 3”D</p>

## Pressure/Temperature Testing Instructions

### Pressure Test Procedure

1. Attach gauge adapter to pressure gauge appropriate for expected line pressure.
2. Remove cap from P/T Plug.
3. Insert gauge adapter probe – gauge will read pressure instantly.
4. Remove gauge / gauge adapter assembly. Valve core will re-seal upon removal.
5. Replace plug cap.

### Temperature Test Procedure

1. Remove cap from Fairfax P/T Plug.
2. Insert thermometer and take temperature reading.
3. Remove thermometer – plug core will re-seal upon removal.
4. Replace plug cap.